

Work Order ID 133390

Monday, June 08, 2015 3:59:56 PM

133390

Page 1

Item ID: D350-607-511

Accept

N900040100Setup Start ***NS1***

Revision ID:

Item Name: Quick Release Basket and Long Cargo Tube Mounting Provisions, Fits LH or RH

Stop ***NS2***

Start Date: 6/05/15 Start Qty: 1.00

1

Cust Item ID:

Required Date: 6/11/15 Req'd Qty: 1.00

1

Customer:

Reference:

Approvals: Process Plan: ML5Date: JUN 09 2015

Tooling:

Date:

Run Start ***NR1***

QC:

Date:

SPC (Y/N):

Date:

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr	Revision Nbr
----------	--------------

D350-607-4

C

J.A

DSI9699

A

100

Document Control

0.00

100

DOCUMENT CONTROL

DC

Memo

0.00

Doc.Control -USB or Paperwork

Photocopy bluefile & type labels per PPP D350-607-511 CHG006

DAS
02
7-89

AUG 05 2015

140

Pick Kit

0.00

140

Packaging

Memo

0.00

Packaging

① J.A

JUL 31 2015

DAS
27
9-89

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____ Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval		
Description Work Order Deviation				Disposition					

Root Cause			FAULT CATEGORY					
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐			
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐			
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐			
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐			
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐			
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐			
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐			
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐			
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐			
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐			
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : ☐						
Misidentified ☐	Past Due ☐							

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition		Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY			
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐	Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐	Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐	Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐
OTHER : ☐					

Picklist Print

Monday, June 08, 2015 3:59:55 PM

Page 2

Work Order ID: 133390

133390

Parent Item: D350-607-511

D350-607-511

Parent Item Name: Quick Release Basket and Long Cargo Tube Mounting Provisions, Fits LH or RH

Start Date: 6/05/15

Required Date: 6/11/15

Start Qty: 1.00

Required Qty: 1.00

D3910-5 Manufactured No 140 Each 17.0000 1 1

D3910-5

Crosstube Lug

JA

DAS

27

9-89

DAS
02
9-89

Location

Loc Qty

Loc Code

ST525

17

117637

11

132001

6

D3984 Manufactured No 140 f 114.0000 2 2

***D3984* -030**

Rubber Extrusion, X-Tube, Per Foot

8 x 3" per kit

DAS
38
9-89

JA

DAS

27

9-89

Location

Loc Qty

Loc Code

ST413

114

115196

14

132156

100

D4148-041 Manufactured No 140 Each 7.0000 1 1

D4148-041

Fwd Crosstube Lug Assembly

DAS
02
9-89

JA

DAS

27

9-89

Location

Loc Qty

Loc Code

ST538

3

132676

3

ST539

4

129951

1

131058

1

131905

2

D4149-041 Manufactured No 140 Each 5.0000 1 1

D4149-041

Aft X-Tube Lug Ass'y

JA

AUG 04-2015

DAS

27

9-89

Location

Loc Qty

Loc Code

ST539

5

129962

1

131915

4

8133978

Monday, June 08, 2015 3:59:55 PM

Shop Packet Print

Page 2

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition				Completed By	
								Lead hand / Supervisor Approval Verification	
								QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐				
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : _____							
Misidentified ☐	Past Due ☐								

Picklist Print

Monday, June 08, 2015 3:59:55 PM

Page 3

Work Order ID: 133390

133390

Parent Item: D350-607-511

D350-607-511

Parent Item Name: Quick Release Basket and Long Cargo Tube Mounting Provisions, Fits LH or RH

Start Date: 6/05/15

Required Date: 6/11/15

Start Qty: 1.00

Required Qty: 1.00

D4775-041

Manufactured No

140 Each

24.0000 2 2

DAS

D4775-041

Strut Assembly

**

J.A

27

9-89

DAS
02
9-89

Location

Loc Qty

Loc Code

ST514

24

127656

1

128501

2

130019

8

131101

1

131941

2

132727

10

D4776-3

Manufactured No

140 Each

12.0000 2 2

D4776-3

Skidtube Clevis

**

JA

AUG 04 2015

DAS

27

9-89

DAS
02
9-89

Location

Loc Qty

Loc Code

ST127

12

130939

10

131799

2

AN4-14A

Purchased No

140 Each

309.0000 20 2 20

AN4-14A

Bolt

**

JA

JUL 31 2015

DAS

27

9-89

DAS
02
9-89

Location

Loc Qty

Loc Code

FG

5

122141

5

ST325A

278

131677

2

M131153

5

M132189

71

M132317

200

ST344

26

M130716

15

M131803

11

Monday, June 08, 2015 3:59:55 PM

Shop Packet Print

Page 3

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition		Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY			
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐	Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐	Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐	Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐
OTHER : _____					

Picklist Print

Monday, June 08, 2015 3:59:55 PM

Page 4

Work Order ID: 133390

133390

Parent Item: D350-607-511

D350-607-511

Parent Item Name: Quick Release Basket and Long Cargo Tube Mounting Provisions, Fits LH or RH

Start Date: 6/05/15

Required Date: 6/11/15

Start Qty: 1.00

Required Qty: 1.00

AN4-42A

Purchased

No

140

Each

68.0000

4

4

AN4-42A

Bolt

**

JA

DAS
27
9-89

DAS
02
9-89

Location

Loc Qty

Loc Code

ST312A

68

M131320

28

M132317

40

4

AN6-13A

Purchased

No

140

Each

22.0000

2

2

AN6-13A

BOLT

**

JA

DAS
27
9-89

DAS
02
9-89

Location

Loc Qty

Loc Code

ST334

22

m131305

22

MS21042L4

Purchased

No

140

Each

5,121.000

24

Z 24

MS21042L4

Locknut

**

JA

JUL 3 1 2015

DAS
27
9-89

DAS
02
9-89

Location

Loc Qty

Loc Code

FP001

26

m124231

26

GA

208

m127813

208

ST260a

4062

m130799

56

m131803

6

m132262

1000

m132382

3000

24

ST305

825

m128300

8

m130388

7

m130922

97

m131618

12

m132123

701

Monday, June 08, 2015 3:59:55 PM

Shop Packet Print

Page 4

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition		Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY			
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐	Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER : ☐					

Picklist Print

Monday, June 08, 2015 3:59:55 PM

Page 5

Work Order ID: 133390

133390

Parent Item: D350-607-511

D350-607-511

Parent Item Name: Quick Release Basket and Long Cargo Tube Mounting Provisions, Fits LH or RH

Start Date: 6/05/15

Required Date: 6/11/15

Start Qty: 1.00

Required Qty: 1.00

MS21042L6

Purchased

No

140

Each

452.0000

2

2

MS21042L 6

Nut

**DAS
02
9-89**

Location

Loc Qty

Loc Code

ST260a

200

m132262

200

ST273A

200

m131624

200

ST305

1

m129909

1

t260a

51

m131317

51

JA

DAS

27

9-89

NAS1149F0432P

Purchased

No

140

Each

837.0000

40

40

NAS1149F0432P

WASHER

**DAS
02
9-89**

Location

Loc Qty

Loc Code

ST260a

760

M131697

760

st268

77

M128995

63

M130388

14

JA

DAS

27

9-89

NAS1149F0663P

Purchased

No

140

Each

96.0000

4

4

NAS1149F0663P

WASHER

**DAS
02
9-89**

Location

Loc Qty

Loc Code

st268

96

M128591

2

M131317

94

JA

JUL 31 2015

DAS

27

9-89

Monday, June 08, 2015 3:59:55 PM

Shop Packet Print

Page 5

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition				Completed By	
								Lead hand / Supervisor Approval Verification	
								QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐				
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : _____							
Misidentified ☐	Past Due ☐								

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-607-3 Rev.D,
INSTALLATION INSTRUCTIONS D350-607-4 Rev. C AND
INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-607 REV. 6
REF TCCA STC: SH94-14
REF FAA STC: SR00213NY
REF EASA STC: EASA.10016996
REF BRAZILIAN STC: 2007S03-03/-04/-05/-06

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 133390 MJS
15-06-09

1.0 PURPOSE

This service instruction provides parts and instructions to facilitate installation of forward Basket Strut for customers that have purchased: D350-607-501 Conversion Kit @ CHG 004, D350-607-511 Quick Release Basket Mounting Kit @ CHG 004, D350-607-541 @ CHG 006, D350-607-543 @ CHG 007, D350-607-545 @ CHG 006, D350-607-547 @ CHG 007 Heli-Utility-Baskets as well as the D350-607-431 Strut Retrofit Kit and the D350-607-641 Long Cargo Tube @ CHG 001.

2.0 PARTS LIST:

Modify the quantities for D3910-5 and add D3910-7 as follows:

QTY -541	QTY -543	QTY -545	QTY -547	QTY -511	QTY -501	PART NUMBER	DESCRIPTION
X						D350-607-541	HELI-UTILITY-BASKET @ CHG 007 OR LATER
	X					D350-607-543	HELI-UTILITY-BASKET @ CHG 008 OR LATER
		X				D350-607-545	HELI-UTILITY-BASKET @ CHG 007 OR LATER
			X			D350-607-547	HELI-UTILITY-BASKET @ CHG 005 OR LATER
1	1	1	1	X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT @ CHG 005 OR LATER
					X	D350-607-501	CONVERSION KIT @ CHG 005 OR LATER
				1	1	D3910-5	X-TUBE LUG
				1	1	D3910-7	X-TUBE LUG

(ADD)

QTY -413	QTY -415	QTY -417	QTY -419	QTY -431	PART NUMBER	DESCRIPTION
X					D350-607-413	HEAVY DUTY LID KIT (LONG)
	X				D350-607-415	HEAVY DUTY LID KIT (SHORT)
		X			D350-607-417	LIGHTWEIGHT LID KIT (LONG)
			X		D350-607-419	LIGHTWEIGHT LID KIT (SHORT)
				X	D350-607-431	STRUT RETROFIT KIT @ CHG 005 OR LATER
				1	D3910-5	X-TUBE LUG
				1	D3910-7	X-TUBE LUG

(ADD)

QTY -641	QTY -611	QTY -511	QTY -431	PART NUMBER	DESCRIPTION
X				D350-607-641	QUICK RELEASE LONG CARGO TUBE
1	X			D350-607-611	LONG CARGO TUBE
1		X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT @ CHG 005 OR LATER
			X	D350-607-431	STRUT RETROFIT KIT @ CHG 005 OR LATER
		1	1	D3910-5	X-TUBE LUG
		1	1	D3910-7	X-TUBE LUG

(ADD)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 14.05.16
CERT. NO.: SH94-14
ISSUE NO.: 6

A	NEW ISSUE	AJS	14.05.16
REV.	DESCRIPTION	BY	DATE
DESIGN	AJS	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9699	SHEET 1 OF 2
APPROVED		TITLE	SCALE
DE APPR.		LUG REPLACEMENT	NTS
DATE	14.05.16	COPYRIGHT © 2014 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

3.0 PROCEDURE:

Install the D350-607-501 Conversion Kit, D350-607-511 Quick Release Mounting Kit or D350-607-431 Strut retrofit kit per Installation Instructions D350-607-3 Rev. D or D350-607-4 Rev. C. While installing the Forward Strut perform the following:

- 3.1 Substitute the Forward Lower D3910-5 X-Tube Lug with the D3910-7 X-Tube Lug as shown in Figure 1.
- 3.2 Install the forward D4775-041 Strut Assembly. Transfer mark from the upper hole on the clevis of the D4775-041 Strut Assembly to the D3910-7 X-tube Lug and drill thru the lug $\varnothing 0.257$ - $\varnothing 0.261$ as shown in Figure 1. Touch up chemical conversion coating per MIL-DTL-5541. Check the witness holes located at the bottom end of the D4775-041 Strut Assemblies to ensure that the thread from the rod end extends past the witness hole.
Torque MS21042L4/-4 nuts to 50-70 in-lbs (5.7-7.9 N-m). Torque MS21042L6/-6 nuts to 160-190 in-lbs (18.1-21.5 N-m).
- 3.3 Complete the installation in accordance with Installation Instructions D350-607-3 Rev. D or D350-607-4 Rev. C.

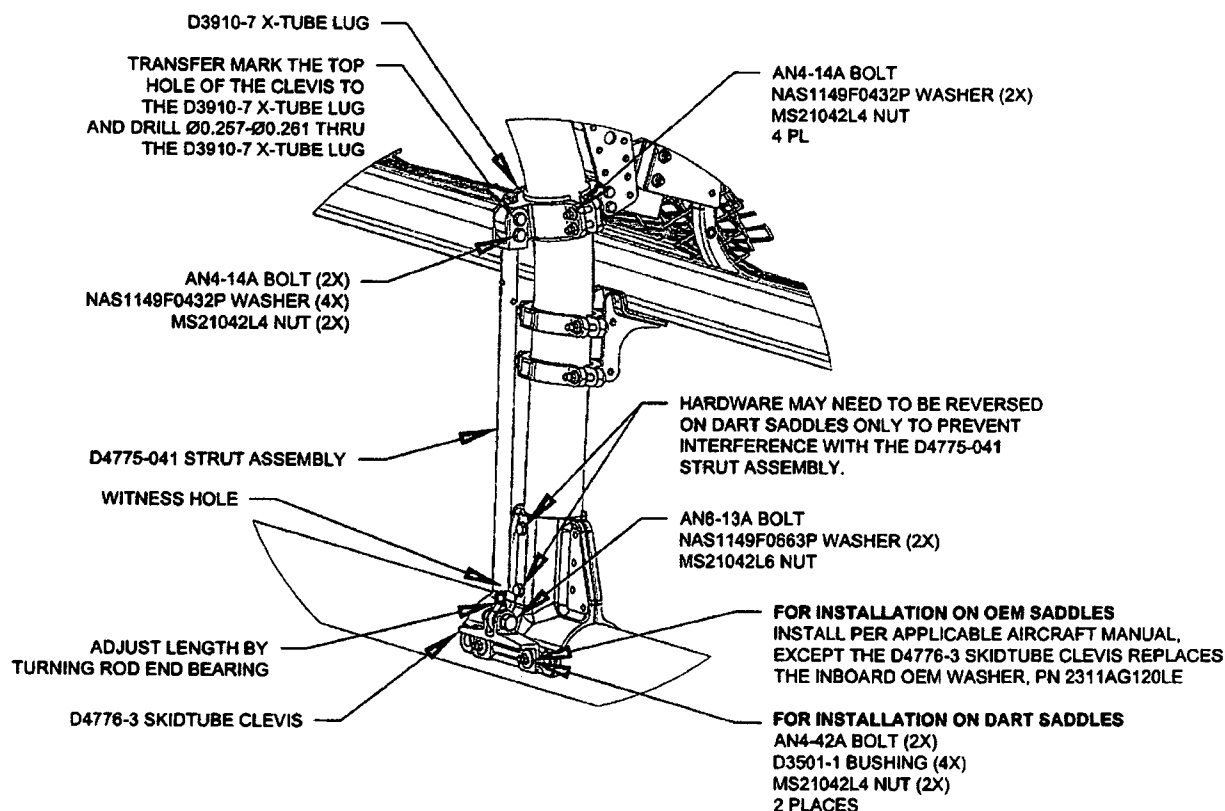


FIGURE 1: INSTALLATION OF D4775-041 FWD STRUT

4.0 WEIGHT AND BALANCE:

There is no weight and balance change associated with this update.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.05.16
CERT. NO.: SH94-14
ISSUE NO.: 6

DESIGN	AJS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9699	SHEET 2 OF 2
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	LUG REPLACEMENT	NTS
DATE	14.05.16	COPYRIGHT © 2014 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

REFERENCE ONLY

DART AEROSPACE LTD.

DAS
02
9-89

D350-607-3
Page 22 of 23

5.0 PARTS LIST

QTY -541	QTY -543	QTY -545	QTY -547	QTY -511	QTY -501	PART NUMBER	DESCRIPTION
X						D350-607-541	HELI-UTILITY-BASKET
	X					D350-607-543	HELI-UTILITY-BASKET
		X				D350-607-545	HELI-UTILITY-BASKET
			X			D350-607-547	HELI-UTILITY-BASKET
1	1	1	1	X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT
					X	D350-607-501	CONVERSION KIT
1	1	1	1		1	D2690-6	LANYARD
				8	8	D3501-1	BUSHING
				2	2	D3910-3	X-TUBE LUG
				2	2	D3910-5	X-TUBE LUG
1	1	1	1		1	D3912-041	EYEBOLT RECEIVER ASSY
				8	8	D3984-030	RUBBER EXTRUSION, X-TUBE
1						D4030-041	LONG BASKET ASSY
	1					D4030-043	LONG BASKET ASSY, LIGHTWEIGHT
		1				D4032-041	SHORT BASKET ASSY
			1			D4032-043	SHORT BASKET ASSY, LIGHTWEIGHT
1					1	D4917-300	PLACARD, MAX LOAD
1						D4086-200	PLACARD, MAX LOAD
	1				1	D4917-315	PLACARD, MAX LOAD
	1					D4086-215	PLACARD, MAX LOAD
		1			1	D4917-320	PLACARD, MAX LOAD
		1				D4086-220	PLACARD, MAX LOAD
			1		1	D4917-332	PLACARD, MAX LOAD
			1			D4086-232	PLACARD, MAX LOAD
				1	1	D4148-041	FWD X-TUBE LUG ASSY
				1	1	D4149-041	AFT X-TUBE LUG ASSY
1	1	1	1		1	D4150-041	ATTACHMENT ARM ASSY
1	1	1	1		1	D4151-041	BASKET FWD HARDPOINT ASSY (LOWER)
1	1	1	1		1	D4151-043	BASKET FWD HARDPOINT ASSY (UPPER)
				2	2	D4775-041	STRUT ASSEMBLY
				2	2	D4776-3	SKIDTUBE CLEVIS
6	6	6	6		6	AN4-13A	BOLT
				20	22	AN4-14A	BOLT
				4	4	AN4-42A	BOLT
1	1	1	1		1	AN4C15	BOLT
1	1	1	1		1	AN310C4	CASTELLATED NUT
				2	2	AN6-13A	BOLT
1	1	1	1		1	MS17984-C413	QUICK RELEASE PIN
6	6	6	6	24	32	MS21042L4	NUT (OR MS21042-4)
				2	2	MS21042L6	NUT
1	1	1	1		1	MS24665-151	COTTER PIN
2	2	2	2		2	NAS1515H4L	WASHER
12	12	12	12	40	56	NAS1149F0432P	WASHER
3	3	3	3		3	NAS1149C0463R	WASHER
				4	4	NAS1149F0663P	WASHER

• COPYRIGHT © 2010 BY DART AEROSPACE LTD •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED
OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

Revision: D
Date: 14.01.02

REFERENCE ONLY

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-607-3 Rev.D,
INSTALLATION INSTRUCTIONS D350-607-4 Rev. C AND
INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-607 REV. 6
REF TCCA STC: SH94-14
REF FAA STC: SR00213NY
REF EASA STC: EASA.10016996
REF BRAZILIAN STC: 2007S03-03/-04/-05/-06

1.0 PURPOSE

This service instruction provides parts and instructions to facilitate installation of forward Basket Strut for customers that have purchased: D350-607-501 Conversion Kit @ CHG 004, D350-607-511 Quick Release Basket Mounting Kit @ CHG 004, D350-607-541 @ CHG 006, D350-607-543 @ CHG 007, D350-607-545 @ CHG 006, D350-607-547 @ CHG 007 Heli-Utility-Baskets as well as the D350-607-431 Strut Retrofit Kit and the D350-607-641 Long Cargo Tube @ CHG 001.

2.0 PARTS LIST:

Modify the quantities for D3910-5 and add D3910-7 as follows:

QTY -541	QTY -543	QTY -545	QTY -547	QTY -511	QTY -501	PART NUMBER	DESCRIPTION
X						D350-607-541	HELI-UTILITY-BASKET @ CHG 007 OR LATER
	X					D350-607-543	HELI-UTILITY-BASKET @ CHG 008 OR LATER
		X				D350-607-545	HELI-UTILITY-BASKET @ CHG 007 OR LATER
			X			D350-607-547	HELI-UTILITY-BASKET @ CHG 005 OR LATER
1	1	1	1	X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT @ CHG 005 OR LATER
					X	D350-607-501	CONVERSION KIT @ CHG 005 OR LATER
				1	1	D3910-5	X-TUBE LUG
				1	1	D3910-7	X-TUBE LUG

(ADD)

QTY -413	QTY -415	QTY -417	QTY -419	QTY -431	PART NUMBER	DESCRIPTION
X					D350-607-413	HEAVY DUTY LID KIT (LONG)
	X				D350-607-415	HEAVY DUTY LID KIT (SHORT)
		X			D350-607-417	LIGHTWEIGHT LID KIT (LONG)
			X		D350-607-419	LIGHTWEIGHT LID KIT (SHORT)
				X	D350-607-431	STRUT RETROFIT KIT @ CHG 005 OR LATER
				1	D3910-5	X-TUBE LUG
				1	D3910-7	X-TUBE LUG

(ADD)

QTY -641	QTY -611	QTY -511	QTY -431	PART NUMBER	DESCRIPTION
X				D350-607-641	QUICK RELEASE LONG CARGO TUBE
1	X			D350-607-611	LONG CARGO TUBE
1		X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT @ CHG 005 OR LATER
			X	D350-607-431	STRUT RETROFIT KIT @ CHG 005 OR LATER
		1	1	D3910-5	X-TUBE LUG
		1	1	D3910-7	X-TUBE LUG

(ADD)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 14.05.16
CERT. NO.: SH94-14
ISSUE NO.: 6

A	NEW ISSUE	AJS	14.05.16
REV.	DESCRIPTION	BY	DATE
DESIGN	AJS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED		DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9699	SHEET 1 OF 2
APPROVED		TITLE	SCALE
DE APPR.		LUG REPLACEMENT	NTS
DATE	14.05.16	COPYRIGHT © 2014 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

Work Order ID 133390

Monday, June 08, 2015 3:59:56 PM

133390

Page 1

Item ID: D350-607-511

Accept

N900040100

Setup Start *NS1*

Revision ID:

Stop *NS2*

Item Name: Quick Release Basket and Long Cargo Tube Mounting Provisions, Fits LH or RH

Start Date: 6/05/15 Start Qty: 1.00 *1*

Cust Item ID:

Required Date: 6/11/15 Req'd Qty: 1.00 *1*

Customer:

Reference:

Approvals: Process Plan: MLJ Date: JUN 09 2015 Tooling: _____ Date: _____

Run Start *NR1*

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop *NR2*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr	Revision Nbr
D350-607-4	C
DSI9699	A

J.A

100 Document Control 0.00

100

DC Memo 0.00

Doc.Control -USB or Paperwork Photocopy bluefile & type labels per PPP D350-607-511 CHG006

SH 2015/7/31

140 Pick Kit 0.00

140

Packaging Memo 0.00

Packaging

① J.A JUL 31 2015



RELEASED
15/07/15

PPP

Part Number	D350-607-511	Box Part Number	BX17	Dimension	17.25 x 11.5 x 6
Description	Quick Release Basket Mounting Installation	Other Packaging	Uline S4426		
		Logo Decals			

Packaging Instructions and Decal Placement

D350-607-511

Tape box with clear tape and add bubble wrap to bottom of box. Put in paperwork and hardware. Add bubble wrap to prevent movement. Close box. Tape with clear tape. Apply Dart tape all around the box. Apply label D2729-3 as per instructions in QSI 014.

D2729-4

D2729-3

N/A

8/5/15

	Dart Aerospace Ltd. 1270 Aberdeen Street Hawkesbury, ON K6A 1K7 CANADA TEL: 1 613 632-5200
QUICK RELEASE BASKET MOUNTING INSTALLATION	
P/N: D350-607-511	CHG006
B/N: BXXXXXX	

Revision: H
Date: 15.06.10